


Sigrist Exit Seal®

Installation Instructions

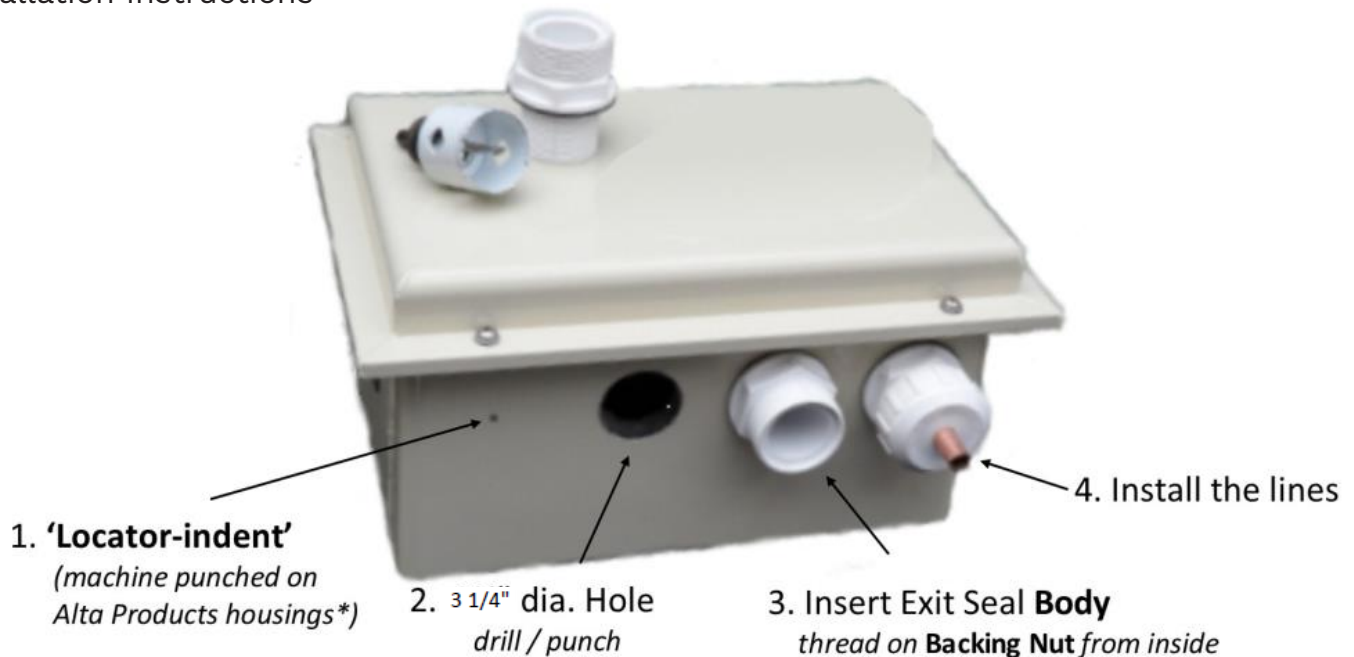

****to be used with 1 7/8" to 2 7/8" pipes (ALTA product# 2200 thru #2287)**

Tools Required:

- 3 1/4" diameter metal cutting hole saw or punch
- Small hand file for de-burring the hole

Note: Before you drill, start on the lowest row making it easier to add lines above later

Installation Steps

1. Drill/punch a 3 1/4" diameter hole using Alta Products 'locator-indent'
2. Remove *only* the **Backing Nut** from the **Body** before inserting the **Body** into newly cut hole
3. Hand tighten (*not wrench*) the **Backing Nut** onto **Body** from inside the housing
4. The Sigrist Exit Seal® is now ready for the line to be installed

Sigrist Exit Seals® can be damaged if exposed to open flame and/or high temperatures during soldering

Important Note

Protect the Sigrist Exit Seal® by **sliding the cap, cap gasket and guide washer away from the joint** and *wrap parts with wet cloth*

CAUTION: Sigrist Exit Seals® are not designed to contain or seal pressurized liquids or gases.

*standard feature on all medium and small size pipe chase housing units

